



Shenzhen Laesent Technology CO.,LTD
Your Testing Partner
☎ +86-(0)755-82566735
✉ Olivia Cao @laesentbiz.cn
◆ The Leading Supplier of Test & Measurement Instruments

XEAST VC903 AC/DC Voltage Digital Clamp Meter Ammeter 1200A Multimeter

● SPECIFICATION

XEAST®

- 1.Frequency:99.99Hz/999.9Hz/9.999KHz/99.99KHz/999.9KHz/9.999MHz
- 2.Temperature:-20~1000°C/ -4~1832°F
- 3.capacitance:9.999nF/99.99nF/999.9nF/9.999uF/99.99uF/999.9uF/9.999mF
- 4.DC voltage:600mV/6V/60V/600V/1000V
- 5.AC voltage: 600mV/6V/60V/600V/750V
- 6.DC Ammeter:600uA/6000uA/60A/600A/1200A
- 7.AC Ammeter:600uA/6000uA/60A/600A/1200A
- 8.Resistance:600Ω/6K/60K/600K/6M/ 60MΩ
- 9.Duty cycle:1% to 99%,±(0.1%+2);
- 10.Measurement mode: Double-integral style A/D transform
- 11.Over range indication: OL
- 12.Working environment: 0~40°C, relative humidity < 80%
- 13.Supply power: 9V (6F22*1 Piece)
- 14.Dimension: 240*90*45mm
- 15.Weight: 325g;

● PRODUCT PICTURES

XEAST®



CAT IV

XERST[®]
VC903 TRMS μA 1200A

$^{\circ}\text{C}/^{\circ}\text{F}$

Ω

% Hz

V

CE OFF

DC/AC TRMS CLAMP METER

TRUE \square REL. HOLD \rightarrow MIN MAX
RMS
AUTO
- 00.00
DC
AC
hFE % C F MKQHz μA V A

SELECT Hz/DUTY RANGE/A

COM

600V
CAT IV

$^{\circ}\text{C}/^{\circ}\text{F}$
V Ω Hz μA








Serial No. 2016102316
Made in China

WARNING

TO AVOID
ELECTRICAL SHOCK
REMOVE TEST LEADS
BEFORE OPENING CASE
OR BATTERY DOOR



9V

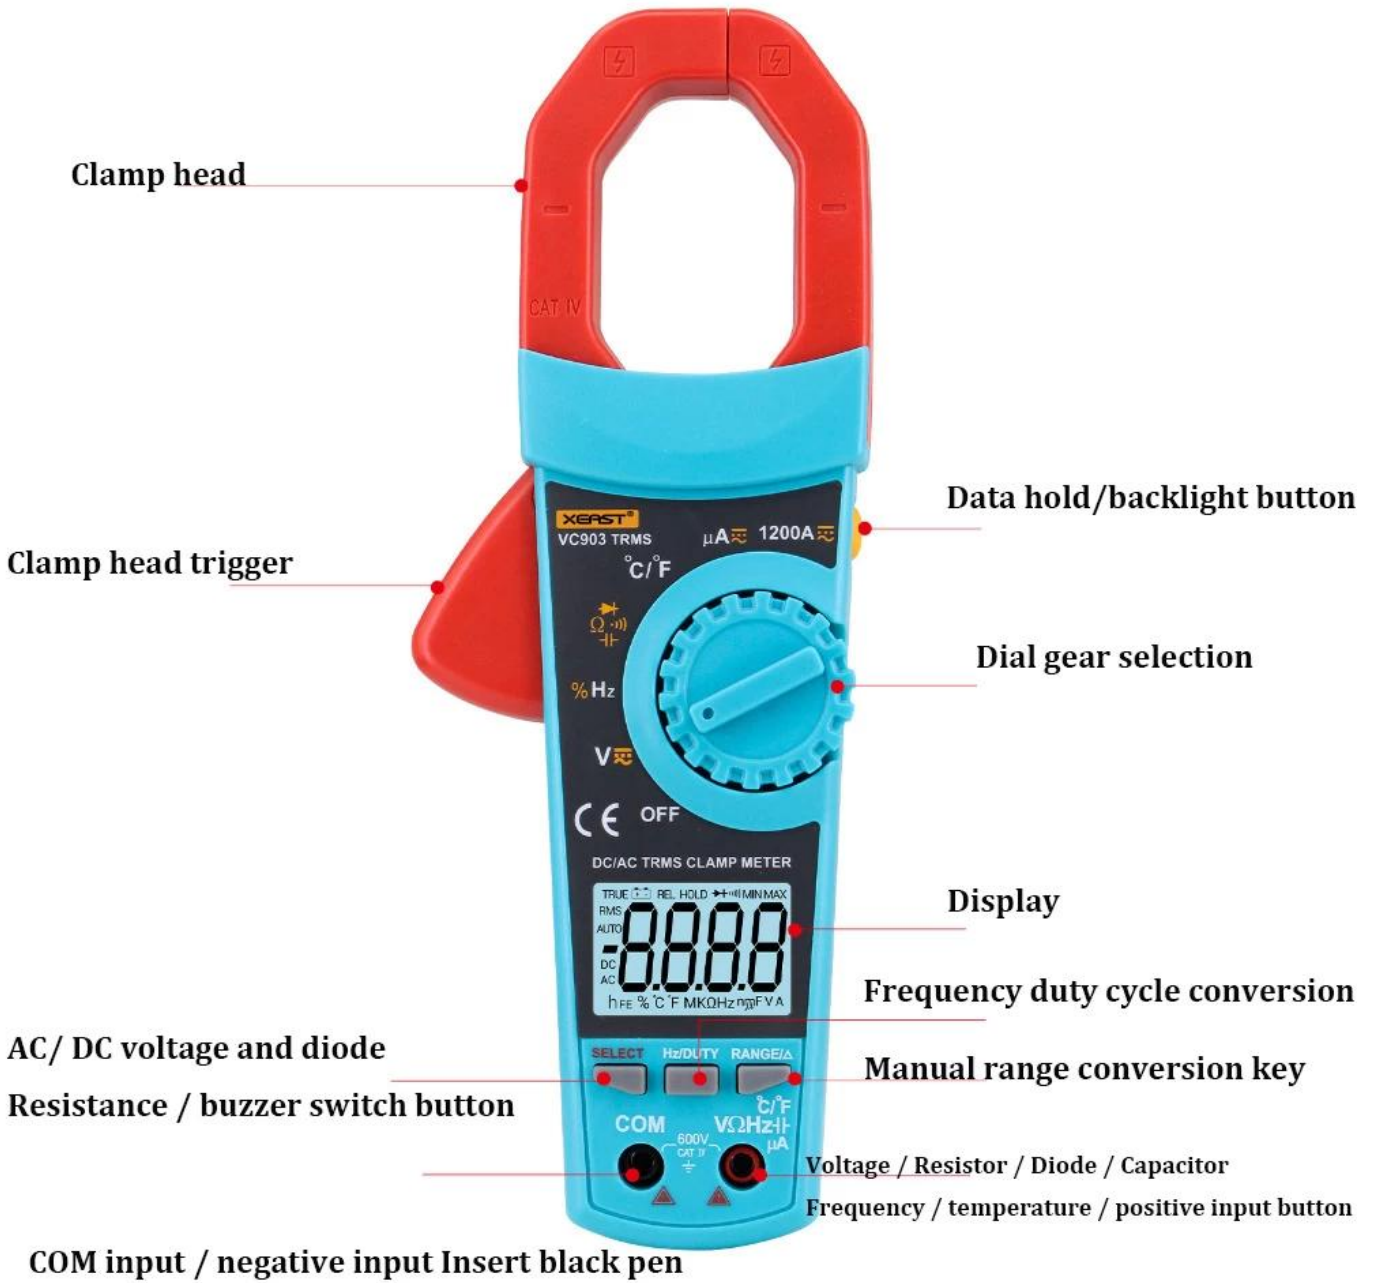

Clamp head

Clamp head trigger

Data hold/backlight button

Dial gear selection

Display

Frequency duty cycle conversion

AC/ DC voltage and diode

Manual range conversion key

Resistance / buzzer switch button

Voltage / Resistor / Diode / Capacitor


Frequency / temperature / positive input button

COM input / negative input Insert black pen



(1) Front Panel (see the picture on the right)

1. Jaws
2. Jaw Release
3. Rotary Switch: To change mode or range.
(from OFF, clockwise)
 - 3a. OFF
 - 3b. AC/DC Voltage
 - 3c. Frequency
 - 3d. Resistance/Continuity/Diode/Capacitance
 - 3e. Temperature
 - 3f. AC/DC Current (μA)
 - 3g. AC/DC Current (A)
4. LCD Display
5. Hz/Duty Cycle Button
6. SELECT: To toggle between AC/DC, Resistance/Continuity/Diode/Capacitance, or $^{\circ}\text{C}/^{\circ}\text{F}$, press this button.
7. RANGE: press this button to enter the manual range; each push increases the range; when the highest range is reached, next push will go back to the lowest range; to exit the manual range mode, press the button for 2 seconds.
8. COM: Common terminal for all measurements.
9. V Ω Hz: Input terminal for voltage, frequency, resistance, continuity, diode, capacitance, temperature, current (no more than 6000 μA), and duty cycle measurements.
10. HOLD: To hold the current reading, press this button and you will see "HOLD" on the display; press again to cancel. To turn on the backlight, press this button for more than 2 seconds; long-press again to turn off.

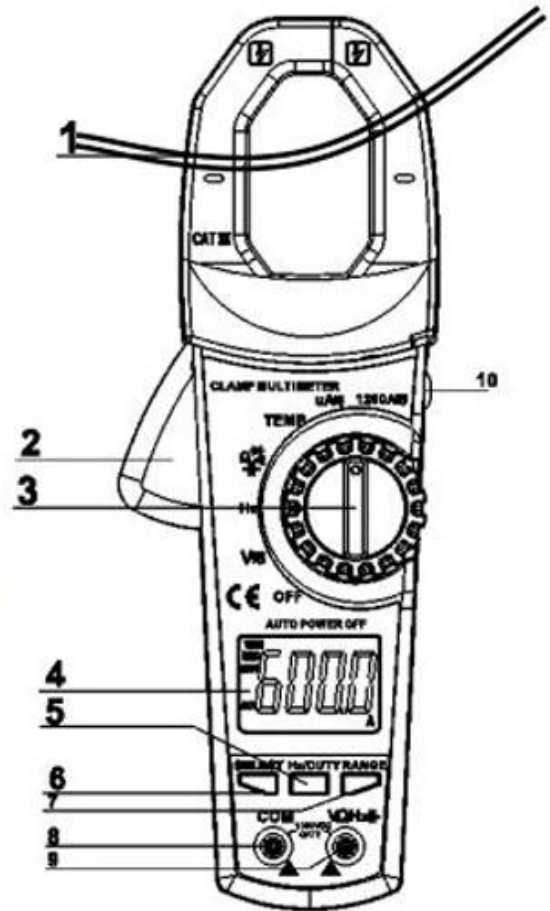

● **TERMS OF TRADE**

XEAST[®]

1). Terms of Payment:

We accept **T/T, L/C, Paypal, MoneyGram and Western Union.**
30% deposit and other 70% balance before shipment.

2). Terms of Shipping:

It depends on clients order quantity and your special request. We often adopt Express (**DHL, TNT, UPS, FEDEX, EMS, SPSR, 139 express and so on**), **LCL, FCL**.

Items will be carefully checked before shipment, and we will update the delivery status timely after the goods are sent out.

● **COMPANY INFORMATION**

XEAST[®]



SALES TEAM



WOKRSHOP

