XEAST 2019□□□□□□□□□□□□□Lux Meter□□□□□□□XE-912

SPECIFICATION

□□□□□□□□□□□□□

XEAST®

XEAST®

Applications

XEAST®

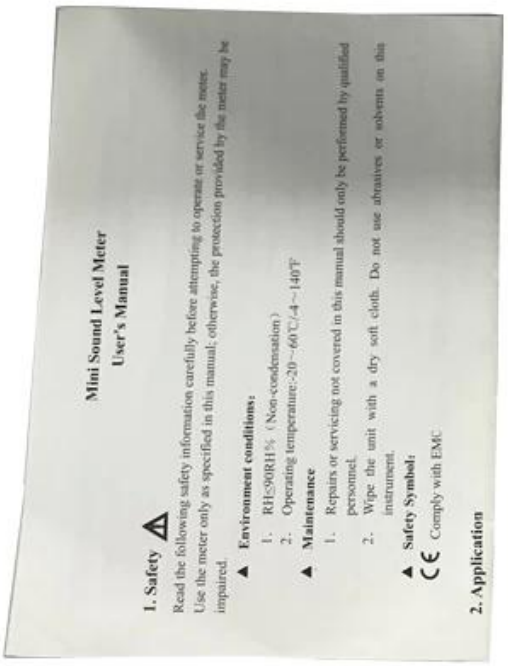

Mini Sound Level Meter
User's Manual

1. Safety

Read the following safety information carefully before attempting to operate or service the meter.
Use the meter only as specified in this manual; otherwise, the protection provided by the meter may be impaired.

▲ **Environment conditions:**
1. RH:90RH1% (Non-condensation)
2. Operating temperature:-20～60℃/-4～140℉

▲ **Maintenance**
1. Repairs or servicing not covered in this manual should only be performed by qualified personnel.
2. Wipe the unit with a dry soft cloth. Do not use abrasives or solvents on this instrument.

▲ **Safety Symbol:**
CE Comply with EMC

2. Application

Terms of Trade

XEAST®

Company Informations

XEAST®

SALES TEAM

XEAST®

Your Testing Partner

WOKRSHOP